


# Upínač E4 pro kleštiny ER

## Collet chucks form E4 for collets ER-system



DIN 6499 (ISO 15488)

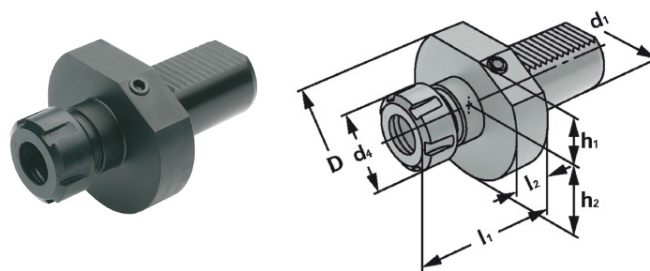

Název Catalog number	d <sub>1</sub>	Rozsah Capacity	D	d <sub>4</sub>	h <sub>1</sub>	h <sub>2</sub>	l <sub>1</sub>	l <sub>2</sub>
E4-16x16	16	1 – 10 (ER 16)	40	28	18	18	40	13
E4-20x16	20	1 – 10 (ER 16)	50	28	25	23	42	18
E4-20x25	20	2 – 16 (ER 25)	50	42	25	23	46	18
E4-25x25	25	2 – 16 (ER 25)	58	42	25	25	55	18
E4-25x32	25	2 – 20 (ER 32)	58	50	25	25	55	18
E4-30x25	30	2 – 16 (ER 25)	68	42	28	30	57	22
E4-30x32	30	2 – 20 (ER 32)	68	50	28	30	75	22
E4-30x40	30	3 – 26 (ER 40)	68	63	28	30	75	22
E4-40x25	40	2 – 16 (ER 25)	83	42	32,5	41,5	75	22
E4-40x32	40	2 – 20 (ER 32)	83	50	32,5	41,5	75	22
E4-40x40	40	3 – 26 (ER 40)	83	63	32,5	41,5	75	22
E4-50x40	50	3 – 26 (ER 40)	98	63	35	49	75	30

dodávka: s vyváženou upínací maticí, bez montážního klíče

delivery: with balanced clamping nut, without wrench